

**TUH1(XR95) SERIES REPAIR PARTS REV. 12/28/2018**

<b>PART NUMBER</b>	<b>DESCRIPTION</b>	<b>TUH1B040</b>	<b>TUH1B060</b>	<b>TUH1B080</b>	<b>TUH1C100</b>	<b>TUH1D120</b>
BLW00864	BLOWER INDUCER 1 STAGE		X			
BLW01137	BLOWER INDUCER 1 STAGE	X				
BLW01139	BLOWER INDUCER 1 STAGE			X	X	X
BNR01077	BURNER	X	X	X	X	X
CNT07541	CONTROL BOARD	X	X	X	X	X
CPT00072	RUN CAPACITOR		X			
CPT00088	RUN CAPACITOR			X		
CPT00120	RUN CAPACITOR	X				
CPT00180	RUN CAPACITOR				X	X
IGN00152	IGNITER	X	X	X	X	X
MOT09053	MOTOR 1/3 HP		X			
MOT11992	MOTOR 1/2 HP				X	
MOT11994	MOTOR 3/4 HP					X
MOT16952	MOTOR 1/2 HP			X		
MOT17360	MOTOR 1/5 HP	X				
RNG00957	RISILIENT RINGS (X2)	X	X	X	X	X
SEN01114	FLAME SENSOR	X	X	X	X	X
SWT01611	THERMAL LIMIT			X		
SWT01612	THERMAL LIMIT					X
SWT01635	THERMAL LIMIT		X		X	
SWT01652	THERMAL LIMIT	X				
SWT01714	DOOR SWITCH	X	X	X	X	X
SWT02124	FLAME ROLLOUT	X	X	X	X	X
SWT02685	INDUCER LIMIT	X	X	X	X	X
SWT03220	PRESSURE SWITCH	X				
SWT03221	PRESSURE SWITCH		X			
SWT03254	PRESSURE SWITCH				X	
SWT03305	PRESSURE SWITCH			X		
SWT03324	PRESSURE SWITCH					X
SEP00243	SEPERATOR TRAP	X	X	X	X	X
TRR01729	TRANSFORMER	X	X	X	X	X
VAL09028	TX-VALVE	X	X	X	X	X